



 sunset

MEASURING GUIDE

The Right Fit Starts with the Right Measure



RECESS FIT: Fitting your blind inside the window recess? Follow these steps to measure accurately for a neat, flush finish.

EXACT FIT (OUTSIDE RECESS): Fitting your blind outside the recess? Follow these steps to measure correctly for full coverage and minimal light gaps.

I RECESS FITTING

A recess fit means the blind will be installed inside the window recess for a clean and integrated look. Measure the full width and height of the recess — the size of the window opening.

We will make the necessary deductions during production to ensure a perfect fit. For the most accurate results, record all measurements in millimetres (mm).

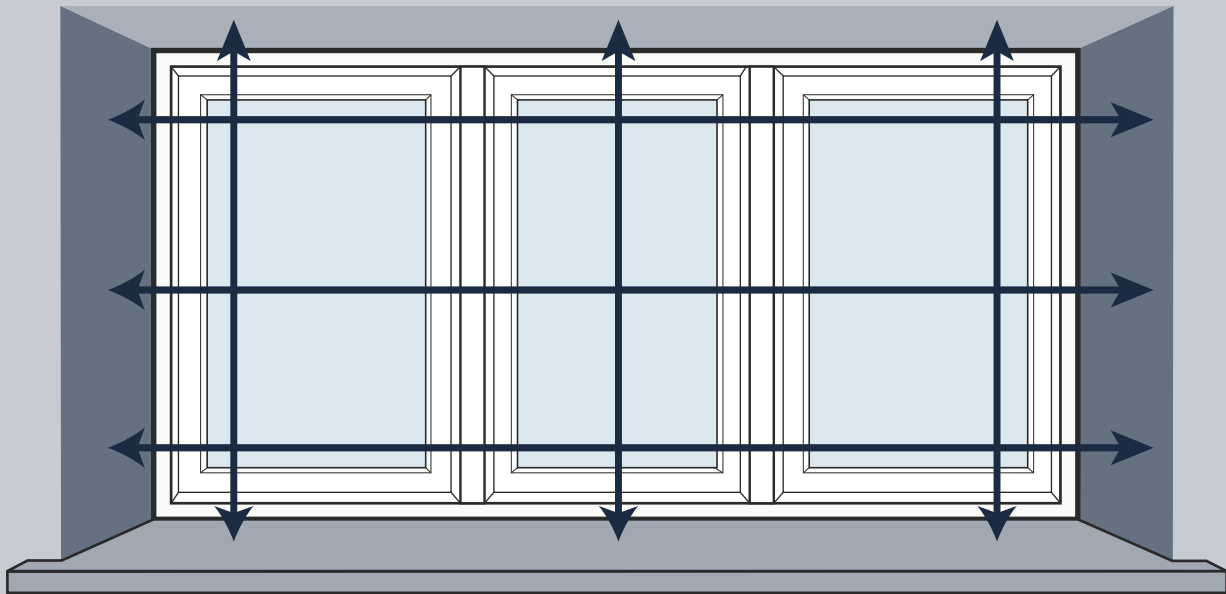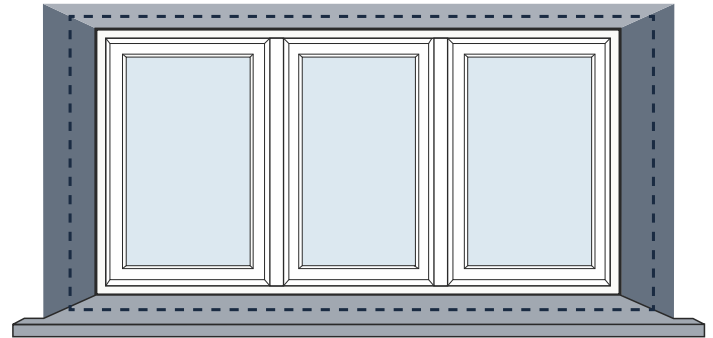

STEP 1 - Measure the Width

Measure the width inside the window recess from the left inner edge to the right inner edge. Take this measurement at three points: the **top**, **middle**, and **bottom** of the recess.

STEP 2 - Measure the Height

Measure the height inside the recess from the top inner edge to the bottom inner edge. Take this measurement at three points: the **left**, **centre**, and **right side** of the recess.

I Important Notes



- Do not make any deductions. We will make the necessary adjustments during production.
- Measure in three places for both width and height and always use the smallest measurements.
- Double-check your measurements before placing your order.
- Use a metal tape measure for the most accurate results.

I Pro Tips for Recess Fitting

- Make sure the window recess is deep enough to accommodate the blind.
- Check for any obstructions inside the recess, such as window handles or tiles.
- Always measure inside the recess, not the surrounding frame.
- This method is suitable for wooden blinds and aluminium venetian blinds.

I EXACT FITTING (OUTSIDE RECESS)

An Exact Fit (Outside Recess) means the blind will be installed outside the window recess to cover the window area. Measure the width and drop you would like the blind to cover. For Exact Fit orders, no size deductions are made — your blind will be manufactured to the measurements you provide. Please record all measurements in millimetres (mm).

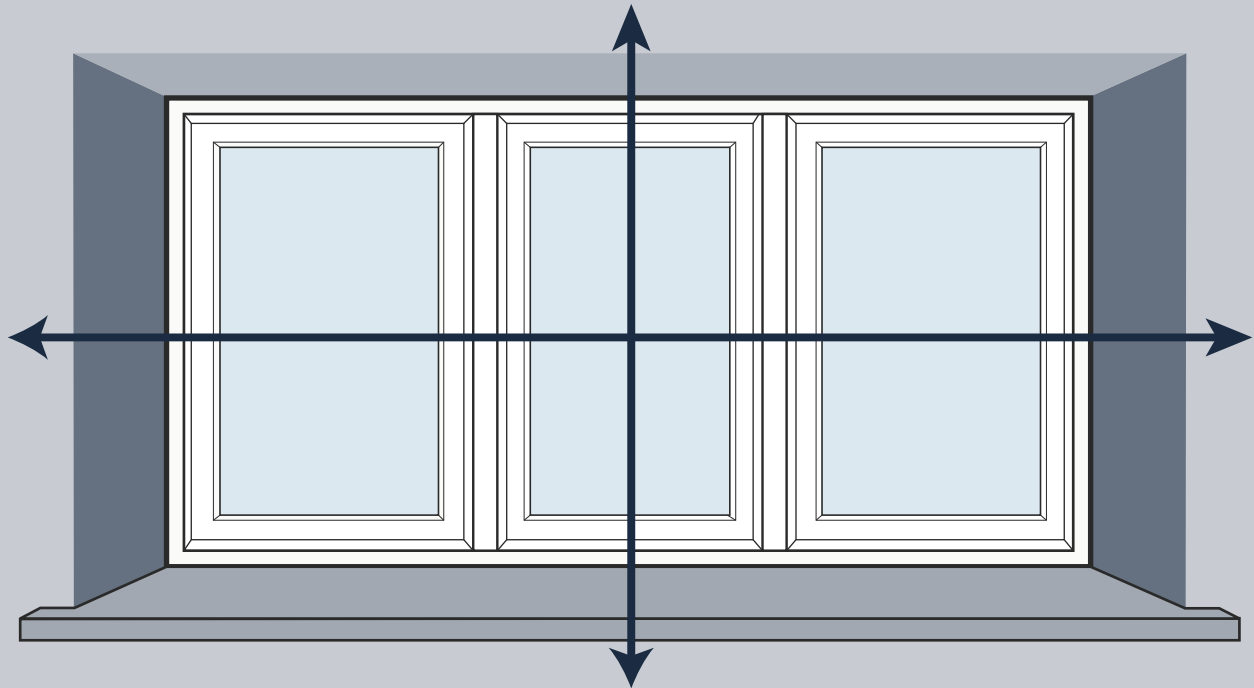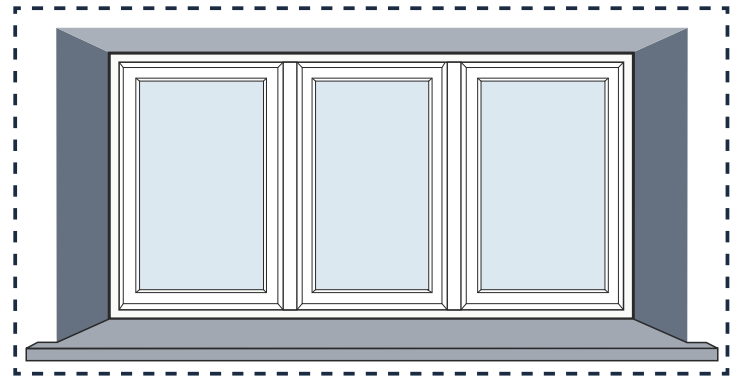

STEP 1 - Measure the Width

Measure the width of the area you would like the blind to cover. Decide how much overlap you want on each side of the window recess and record the full width.

STEP 2 - Measure the Height

Measure the drop from the top fixing point to where you would like the blind to finish. Record the full height you want the blind to cover.

I Important Notes

- We do not make any deductions. The blind will be manufactured **exactly to the measurements you provide**.
- If you are replacing an **existing blind** with the same size, simply measure the blind including its fittings and select **Exact Fit** when ordering.
- Always double-check your measurements before placing your order.

I Pro Tips for Exact Fitting

- To minimise light leakage, allow the blind to overlap the recess by at least **70mm** at the top and **50mm** on each side.
- The overlap at the bottom is a matter of personal preference, but consider obstacles such as radiators, handles, or window sills.
- Ensure there is enough space above the window to install the blind.
- This method is suitable for wooden blinds and aluminium venetian blinds.